


Thermocouple Connectors

Connector	Zones
MAST/MTC = Mould Thermocouple Connector	05 = 5 Zones 08 = 8 Zones 12 = 12 Zones



Mould Power/Input Connectors

Connector	Zones
MAST/PIC = Mould Power Connector	05 = 5 Zones 08 = 8 Zones 12 = 12 Zones

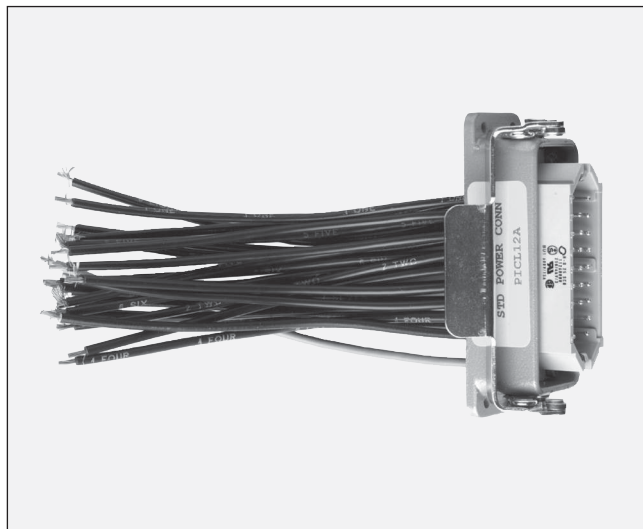

Single Zone Connectors

MAST/CKPTM1	MAST/CKPTOC1	MAST/CKPTF1	MAST/CKPTIC1
			